 
 


#### INSIDE RECESS MEASURING

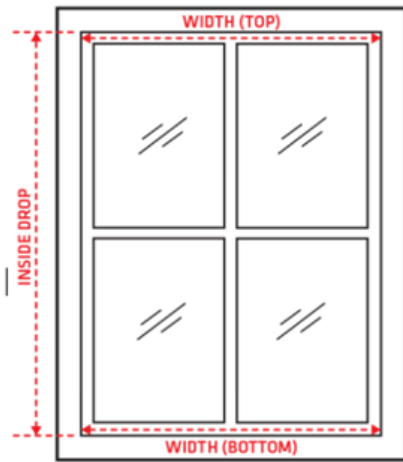

#### OUTSIDE RECESS MEASURING

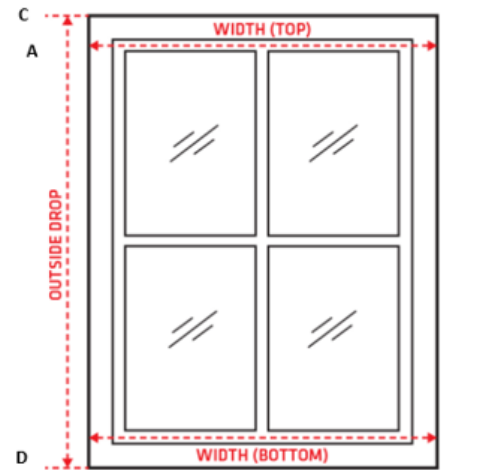

#### Measuring Instructions for INSIDE RECESS INSTALLATION

Measure the width in three places down the length of the window just in case the window narrows. Use the smaller of the three measurements.

Deduct 1cm off your measured recess width, before entering your ACTUAL BLIND WIDTH (cm) on your order. This will prevent the blind catching.

Measure the drop (height) of the window from the top of the recess down to the sill, in three places along the width. Use the smaller of the three measurements to input as your ACTUAL BLIND DROP (cm) on your order.

#### Measuring Instructions for OUTSIDE RECESS INSTALLATION

To measure the width of your blind for the outside of the window, measure

- The width of the wooden strapping or facing above the window A-B
- Or the width of the window sill
- The width of the window recess plus 5cm either side of the window, if the above two do not exist  
Input this as your ACTUAL BLIND WIDTH (cm) on your order.

To measure the drop (height) of your blind for the outside of the window, measure

- From the top of the wooden strapping or facing down to your desired length C-D
- If neither of these are on your window then measure 10cm above the window, down to your desired length
- If your sill projects outwards, measure to the top of the sill, for the blinds to sit on  
Input this as your ACTUAL BLIND DROP (cm) on your order.

#### Installation Height

If possible, please provide us with your installation height for the blind, so we can ascertain an appropriate chain length.

To measure this, measure from the top of where you are planning to install the blind, down to the floor.